

# fosera® LAMP mini

## USER MANUAL




### Touch switch

The touch switch allows you to control the illumination levels of the lamp.

Pressing the switch four times will make the light turn to the off position again.

| Times the touch switch is pressed | 0   | 1   | 2   | 3    |
|-----------------------------------|-----|-----|-----|------|
| Light power                       | Off | 15% | 50% | 100% |

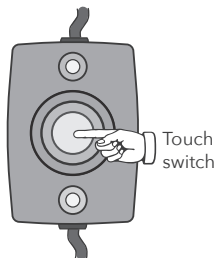


Touch Switch front view

### Night Light Mode

When the Lamp mini is connected to an SHS which has the Night Light function, in order to activate this function, the Lamp mini night light mode has to be activated too. This function turns the Lamp on automatically at night (as a security light for example) or when the panel is no longer receiving energy from the sun.

To activate Night Light Mode on the lamp, turn the Touch Switch over and find the NL mode switch and move it from Normal to NL. Next, make sure you activate NL mode on your Fosera Solar Home System battery box (refer to the battery box user manual for instructions). NL mode must be activated both on the battery box and the lamp touch switch.

| Times the touch switch is pressed | 0    | 1   | 2   | 3   |
|-----------------------------------|------|-----|-----|-----|
| Light power                       | 100% | Off | 15% | 50% |

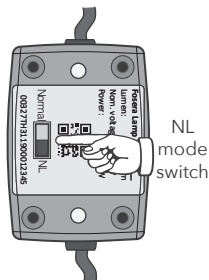

Touch Switch back view

## Security advice / maintenance

- Do not expose the lamp to any liquids or rain
- Do not open or repair any component of the lamp by yourself. This should be only done by an authorized technician. Otherwise the warranty will be void.
- If the cables are damaged, make sure that they are repaired or replaced
- Do not use loads and appliances that are not designed or certified for the system by Fosera
- The system components are not fire resistant. Keep away from fire.

## Warranty

### We trust in the quality of our products.

All Fosera battery boxes, lighting products and PV modules come with 3 years warranty. During this period we guarantee that our products are free from defects in material or workman ship.

Please contact your dealer or local Fosera sales agent if you experience any problems with the product. Your local dealer will then assess the defect and decide whether the product can be repaired or has to be replaced.

Fosera is not responsible for any consequential damage or damage that exceeds the value of the product. A warranty repair does not extend the warranty period. Appliances, like radio, TV, PAYG remote or fans are not included in the overall Fosera warranty for electronic components and may have different warranty terms. The warranty becomes invalid if the device is used other than intended by the manufacturer. This warranty does not cover failures caused by incorrect installation, set up or unusual use. The warranty is also void in case of repairs by any unauthorized or untrained person.

For support please contact your local retailer or our headquarters via [warranty@fosera.com](mailto:warranty@fosera.com). Please enter the name and, if possible, the serial number of the product and the date of purchase.

## Recycling information

Do not throw any of the components or the controller box into the regular trash when discarding. Please recycle to help minimize pollution and to protect the global environment. All Fosera components used for manufacturing the system are recyclable. For more information on the Waste from Electrical and Electronics Equipment (WEEE) regulations, please visit the following webpage:

[http://ec.europa.eu/commission/index\\_en](http://ec.europa.eu/commission/index_en)



Fosera Solarsystems GmbH & Co KGaA

Beim Muehlbach 3 • 89171 Illerkirchberg • Germany

Tel.: +49 7346 9246973 • [info@fosera.com](mailto:info@fosera.com) • [www.fosera.com](http://www.fosera.com)